

- ① KEY shows the location of parts diagramed in the illustration.
- ② Parts numbers begin with `V` and `W` are standard parts of the market.
- ③ `LH` and `RH` on the parts name are described against the moving direction of the machine or are described on the condition how to install parts on the machines.
- ④ SPC : The following symbol classifies parts to be used for machines.
 - `\*` means standard parts.
 - `T` shows that the parts can be installed as optional parts.
 - `R` shows that the parts can be used as applicable parts to replace originally equipped parts.

- ⑤ Upper column : QTY shows the number of parts to be used for one unit of machine.

`M` is indicated for parts supplied by a meter long.

`l` is indicated for parts supplied by liter.

`AR` is indicated for parts need to be adjusted or regulated.

Lower column : serial number

—229 means serial number up to 229.

230— means serial number 230 and after.

- ⑥ ITC : Interchangeability

`1`...OLD ← NEW

New parts can be used in place of the old parts.

`2`...OLD → NEW

Old parts can be used in place of the new parts.

`3`...OLD →← NEW

Old parts and new parts can not be replaced each other.

- ⑦ COL : Color code

Color is signified with color code number for colored parts.

Please see the color list shown in the next page.

- ⑧ GRP : Parts shown in this column can be replaced by SET parts.

Example : Parts marked ① can be replaced by parts marked ②, and ③ for ④, so the rest follow in the same alphabetical order.

- ⑨ Remarks

* Other maker's part code number is shown in this column.

* When Fig. No. is shown in the Remark column of SET parts or ASSY parts, each of their component parts are listed in said Fig. No.

3. Color :

The following colors are used color parts.

COLOR CODE	COLOR	SPRAY TYPE PARTS CODE	PAINTS 4K DRUM PARTS CODE	PAINTS 16K DRUM PARTS CODE
4 L	NEO BLUE	1300-985-001-10	1300-985-003-00	_____
7 F	MIRROR BLACK	1300-954-001-10	1300-954-003-00	1300-954-004-00

NOTE : Color code is signified only for the parts assigned by the maker as color parts.

4. Serial Numbers :

For chassies serial number is shown on the LABEL.

Please see

 


5. Parts Order

- 1) Parts numbers listed in the parts catalogue are all registered in “ISEKI on-line computer” .
- 2) When you order parts, please make sure of correct numbers.
- 3) When substitute parts is available, the part number ordered will be automatically turned to a new part number.
- 4) Please be sure to use “ISEKI GENUINE PARTS” .

Any other similar parts other than ISEKI parts when used may cause a trouble that makes us unable to repair or guarantee the warrant.

[illegible]

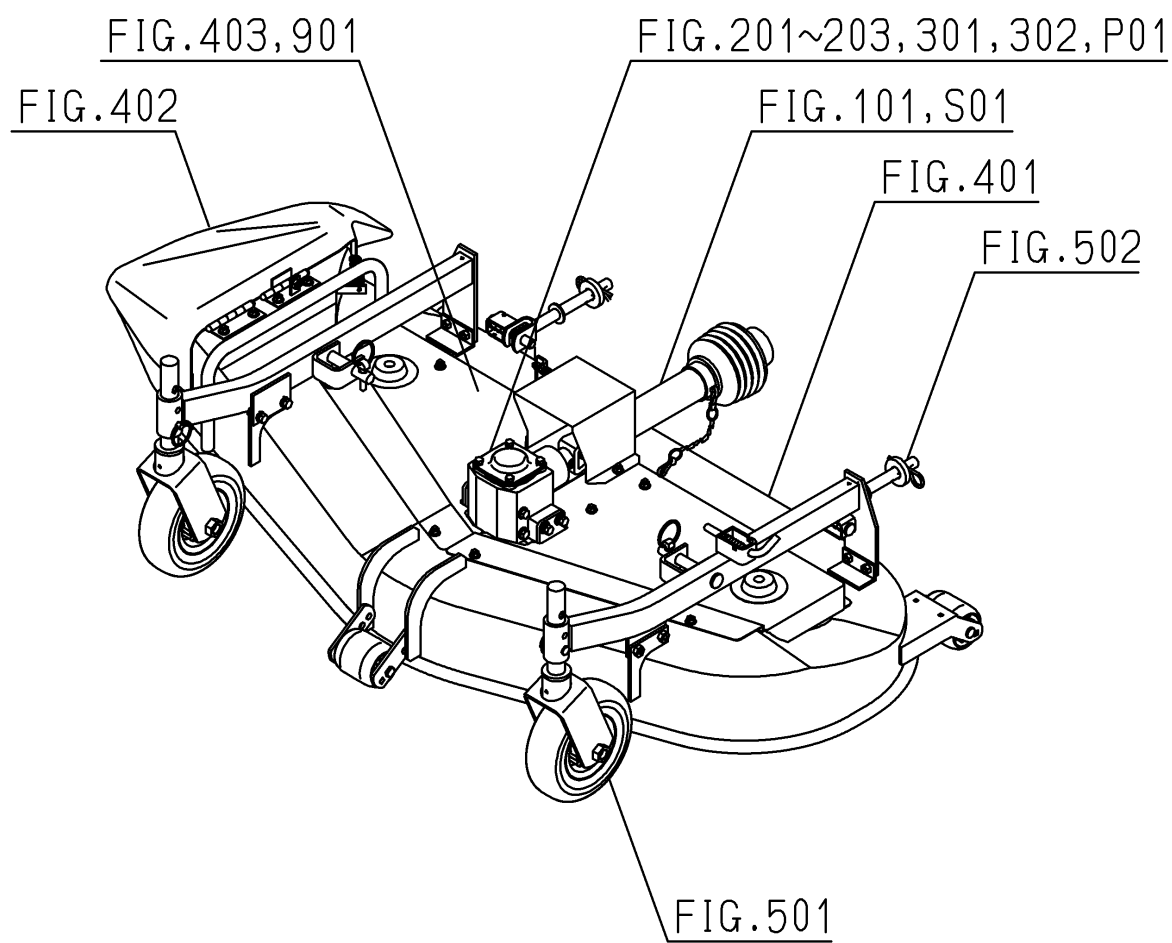

Contents

SSM54

JOINT(UNIVERSAL)SYSTEM..... Fig.101

CASE(BEVEL)SYSTEM..... Fig.201

PULLEY SYSTEM..... Fig.202

V BELT SYSTEM..... Fig.203

METAL SYSTEM..... Fig.301

BLADE SYSTEM..... Fig.302

DECK(MOWER)SYSTEM..... Fig.401

COVER(DISCHARGE)SYSTEM..... Fig.402

COVER(BELT)SYSTEM..... Fig.403

WHEEL(GAUGE)SYSTEM..... Fig.501

LINK(LIFT)SYSTEM..... Fig.502

LABEL..... Fig.901

OPTIONAL PARTS


CASE(BEVEL/28-16)ASSY (REPAIR)..... Fig.P01

COMPONENT PARTS

COMPONENT PARTS

FOR 8658-101-650-00 ON Fig.101..... Fig.S01

 
FIG.203 V BELT SYSTEM

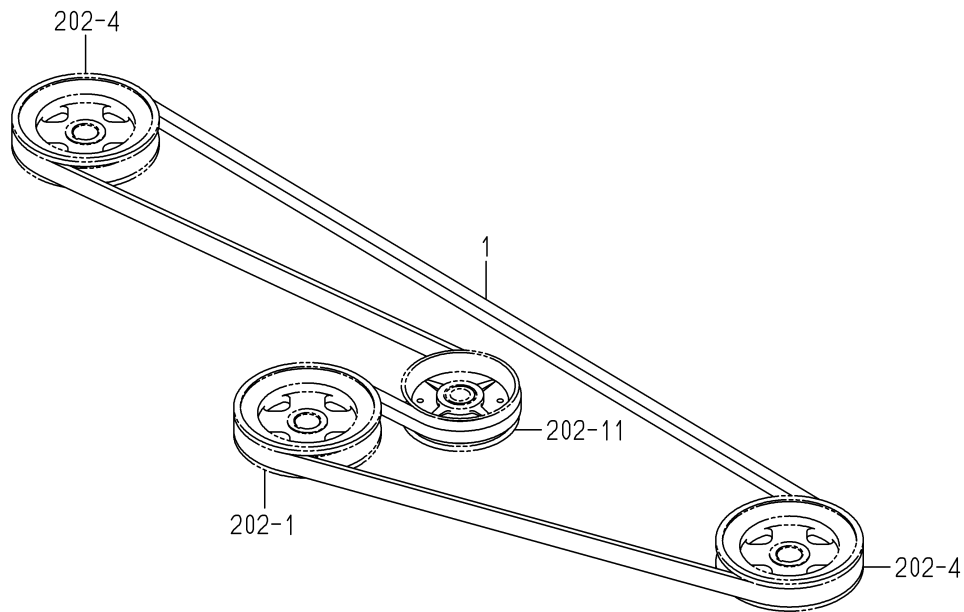

8657-203 -0100

[illegible]

 FIG.302 BLADE SYSTEM

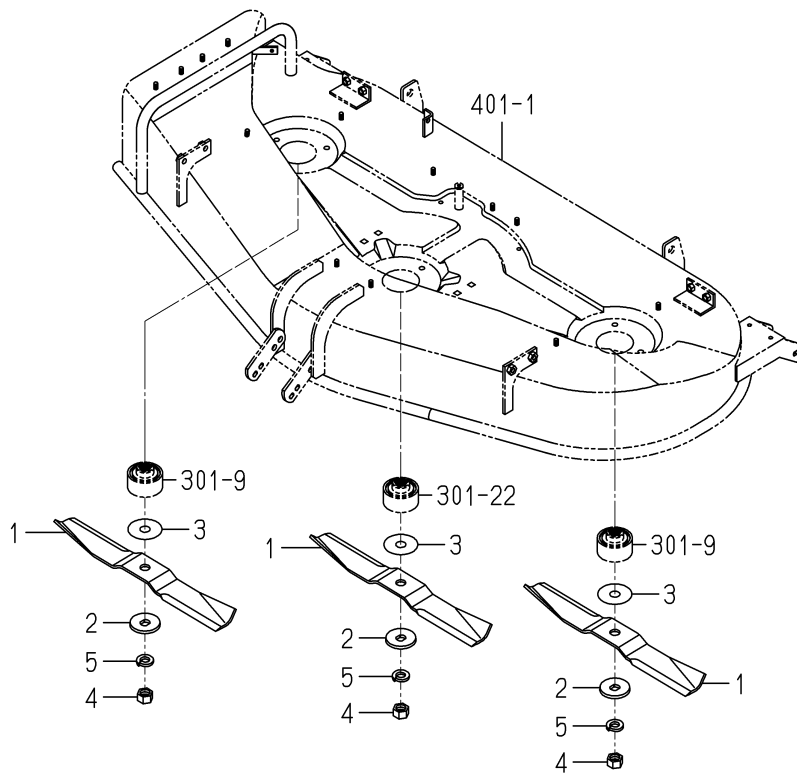

8657-306C-0100

[illegible]


 
[illegible]

 FIG.501 WHEEL(GAUGE)SYSTEM

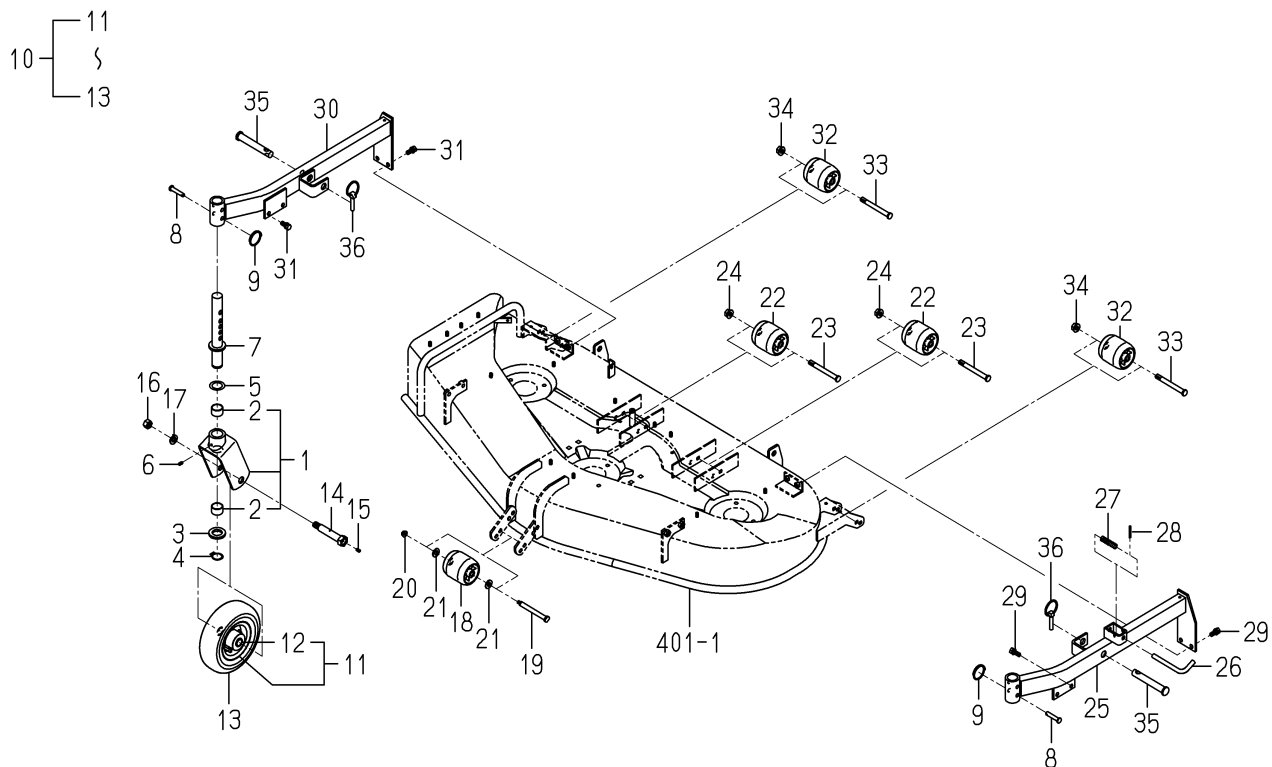

8657-501D-0100

KEY	PART CODE	DESCRIPTION	S P C	TYPE OF MODEL		I T C	C O L	G R P	REMARKS
				SSM54	SFH240				
1	8595-501-310-01	FORK/WHEEL ASSY	*	2			4L		
2	8654-501-201-00	BUSH/30X34X20	*	4					
3	3670-701-010-00	WASHER/30X50X05	*	2					
4	V704-140-030-00	RING,SNAP/30 C	*	2					
5	1427-432-005-00	COLLAR,THRUST	*	2					
6	V760-150-000-00	NIPPLE,GREASE	*	2					
7	8595-501-280-01	PIN/GAUGE COMP	*	2			4L		
8	2144-106-005-00	PIN/10X53	*	2					
9	8654-501-006-10	SPRING/CLIP	*	2					
10	8595-501-320-10	WHEEL/GAUGE ASSY	*	2					
11	8595-501-350-10	WHEEL ASSY	*	2					
12	8595-501-351-10	RBB	*	4					
13	8595-501-360-10	TIRE/8X3.00-4 ASSY	*	2					
14	8595-501-007-00	PIN/20X112	*	2					
15	V760-150-000-00	NIPPLE,GREASE	*	2					
16	V304-460-016-00	NUT/M16	*	2					
17	V401-160-016-00	WASHER,SP/M16	*	2					
18	8595-501-001-20	WHEEL/GAUGE/FRONT	*	1					
19	8595-501-006-00	PIN/12X119	*	1					
20	V362-260-008-00	NUT/WASHER	*	1					
21	V411-260-012-00	WASHER /M12	*	2					
22	8595-501-001-20	WHEEL/GAUGE/FRONT	*	2					
23	8595-505-051-30	PIN/12X117	*	2					
24	V360-260-012-00	NUT/WASHER	*	2					
25	8657-501-270-00	ARM/GAUGE/RH COMP	*	1					
26	8654-501-042-00	STOPPER/MOWER	*	1					
27	8654-501-043-00	SPRING/HC058	*	1					
28	V580-140-404-00	PIN,SPRING/4X40	*	1					
29	V211-261-002-50	BOLT(S) M10X25	*	4					
30	8657-501-280-00	ARM/GAUGE/RH COMP	*	1					


 
[illegible]

 FIG.P01 CASE(BEVEL/28-16)ASSY (REPAIR)

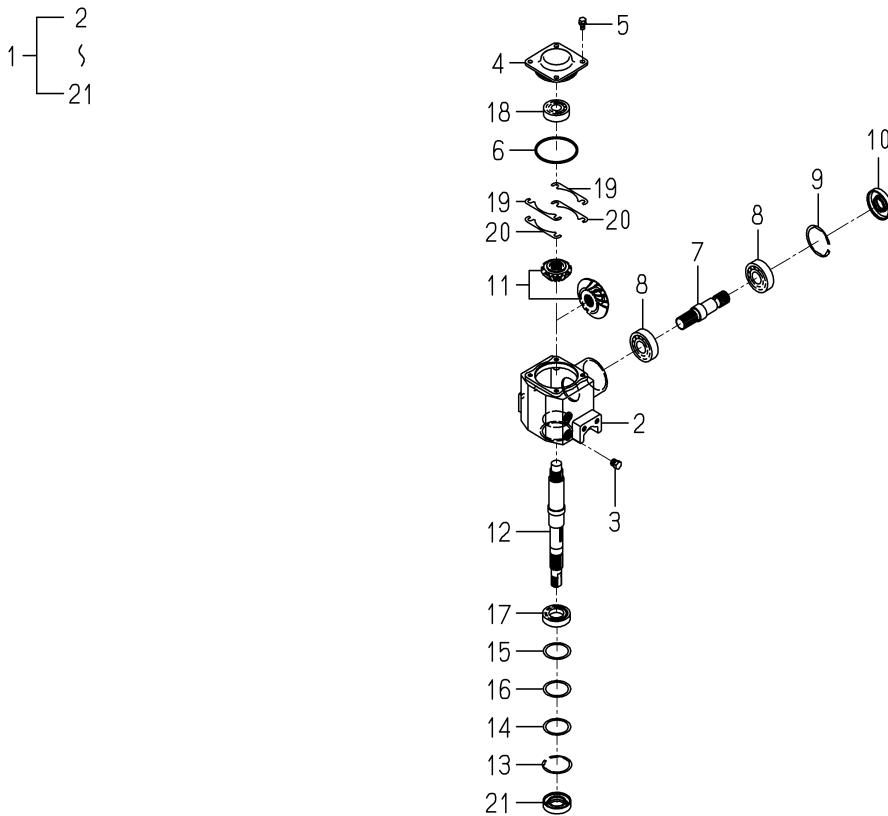

8657-201V-0100

[illegible]

Numerical Index

8657-095-300-00

Part Code	Fig. Key		Part Code	Fig. Key		Part Code	Fig. Key	
1427-432-005-00	501	5	8595-201-025-00	201	9	8654-510-002-00	502	5
1434-211-004-00	202	3		P01	10	8654-901-002-00	901	5
1444-514-005-10	502	7	8595-201-041-00	201	11	8657-201-072-01	201	21
1560-214-003-00	201	17		P01	12	8657-201-073-01	201	22
	P01	18	8595-301-031-00	301	3	8657-201-310-00	P01	1
1560-601-028-00	502	3	8595-306-005-10	302	2	8657-201-320-00	201	10
1593-901-015-00	901	8	8595-306-006-00	302	3		P01	11
1594-218-001-00	201	7	8595-306-007-00	302	4	8657-202-003-20	202	1
	P01	8	8595-407-004-00	403	2		202	4
1594-221-001-00	301	4		403	4	8657-202-220-10	202	9
	301	17	8595-501-001-20	501	18	8657-203-001-00	203	1
1673-525-002-30	501	36		501	22	8657-301-004-00	301	1
2144-106-005-00	501	8		501	32	8657-301-005-00	301	12
2149-602-012-00	403	5	8595-501-006-00	501	19	8657-301-007-00	301	9
2500-901-014-30	901	4	8595-501-007-00	501	14		301	22
2500-901-027-00	901	1	8595-501-280-01	501	7	8657-301-008-00	301	24
3621-211-003-00	202	14	8595-501-310-01	501	1	8657-301-009-00	301	15
3670-701-010-00	501	3	8595-501-320-10	501	10	8657-306-005-00	302	1
3737-341-006-00	202	16	8595-501-350-10	501	11	8657-402-310-00	401	1
3737-341-007-00	202	17	8595-501-351-10	501	12	8657-406-210-01	402	1
3746-111-011-00	202	6	8595-501-360-10	501	13	8657-407-310-00	403	1
3768-112-001-00	402	4	8595-505-051-30	501	23	8657-407-330-00	403	3
7821-102-008-00	S01	7		501	33	8657-501-270-00	501	25
	S01	14	8595-510-004-00	501	35	8657-501-280-00	501	30
7821-102-220-00	S01	8	8595-608-082-10	502	2	8658-101-065-01	101	4
	S01	15	8595-901-005-00	901	6	8658-101-650-00	101	1
7955-201-026-00	201	2	8595-901-006-00	901	2	8658-101-661-00	S01	2
	P01	3	8595-901-007-00	901	3	8658-101-662-00	S01	6
8593-014-200-10	202	11	8597-202-501-00	202	10	8658-101-671-00	S01	9
8595-201-011-00	201	1	8597-301-002-00	201	24	8658-101-672-00	S01	13
	P01	2	8654-101-221-00	S01	1	8658-101-673-00	S01	16
8595-201-012-00	201	3	8654-101-230-00	S01	3	8658-101-674-00	S01	17
	P01	4		S01	10	8658-407-065-10	403	7
8595-201-013-00	201	6	8654-101-232-00	S01	4	8667-510-280-00	502	1
	P01	7		S01	11	8667-901-001-00	901	7
8595-201-015-00	201	13	8654-101-233-00	S01	5	P115-810-011-00	402	2
	P01	14		S01	12	V201-260-803-00	402	5
8595-201-016-00	201	14	8654-202-016-00	202	2	V211-260-801-60	201	4
	P01	15		202	5		P01	5
8595-201-017-00	201	15	8654-301-004-00	301	7	V211-261-002-50	301	2
	P01	16		301	20		301	13
8595-201-021-00	201	18	8654-501-006-10	501	9		501	29
	P01	19	8654-501-042-00	501	26		501	31
8595-201-022-00	201	19	8654-501-043-00	501	27	V211-360-801-60	101	5
	P01	20	8654-501-201-00	501	2	V211-661-002-00	201	23

Numerical Index

8657-095-300-00

Part Code	Fig. Key	Part Code	Fig. Key	Part Code	Fig. Key
V304-260-008-00	202 18 402 6	V760-150-000-00	301 11 301 14		
V304-260-010-00	201 26 301 16		501 6 501 15		
V304-460-016-00	202 8 501 16				
V360-260-012-00	501 24 501 34				
V362-260-008-00	403 6 403 8 501 20				
V363-260-008-00	402 3				
V401-160-010-00	201 27				
V401-160-016-00	202 7 501 17				
V401-160-020-00	302 5				
V411-260-010-00	201 28				
V411-260-012-00	501 21				
V411-260-014-00	201 25				
V411-260-022-00	502 6				
V580-140-404-00	501 28				
V580-140-504-00	502 4				
V580-140-804-00	101 2				
V600-110-600-60	201 16 P01 17				
V600-110-690-80	301 5 301 18				
V704-140-016-00	202 13				
V704-140-017-00	202 12				
V704-140-030-00	501 4				
V705-140-052-00	301 6 301 19				
V707-140-055-00	201 12 P01 13				
V707-140-062-00	201 8 301 10 301 23 P01 9				
V721-103-108-00	201 5 P01 6				
V744-130-551-20	201 20 P01 21				
V744-135-520-80	301 8 301 21				
V760-150-000-00	202 15				

Alphabetical Index

8657-095-300-00

Description	Fig. Key	Description	Fig. Key	Description	Fig. Key
ARM/GAUGE/RH COMP	501 25	COVER/JOINT	101 4	NUT/WASHER	501 34
	501 30	COVER/UNIVERSAL	403 7	O-RING/G80	201 5
ARM/TENSION ASSY	202 9	DECK/MOWER/54/SFH	401 1		P01 6
BEARING	301 5	FITTINGYOKE	S01 1	PIN, HAIR (19)	502 7
	301 18	FORK/WHEEL ASSY	501 1	PIN, SPRING/4X40	501 28
BEARING, RB 6006	201 16	GEAR/BEVEL/28-1 SET	201 10	PIN, SPRING/5 X40 W	502 4
	P01 17		P01 11	PIN, SPRING/8 X40 W	101 2
BEARING/BALL 6205SH2	301 4	GREASENIPPLE	S01 4	PIN/10X53	501 8
	301 17		S01 11	PIN/12X117	501 23
BEARING/BALL 6305SH2	201 7	INSULATOR/150X200	403 2		501 33
	P01 8		403 4	PIN/12X119	501 19
BEARING/BALL/6304SH2	201 17	JOINT/UNIVERSAL SET	101 1	PIN/16X96	502 2
	P01 18	JOURNALCROSSE ASSY	S01 3	PIN/19X135	501 35
BELT/VB101	203 1		S01 10	PIN/20X112	501 14
BLADE/60X472/D	302 1	KEY/06X06X28	202 2	PIN/GAUGE COMP	501 7
BLOT/M10X25	201 24		202 5	PIN/LIFT COMP	502 1
BOLT(S) M10X25	301 2	LABEL/CE	901 1	PIPE/GREASE	301 15
	301 13	LABEL/DANGER	901 4	PLATE/03X15X65	402 2
	501 29	LABEL/DANGER/DISCHAR	901 6	PLUG, DRAIN (1/4)	201 2
	501 31	LABEL/DANGER/JOINT/G	S01 17		P01 3
BOLT, SEMS (SP)	101 5	LABEL/GAUGEWHEEL	901 7	PULLEY COMP	202 11
BOLT, SEMS (S) M8X16	201 4	LABEL/MAINTENANCE	901 8	PULLEY/VB137	202 1
	P01 5	LABEL/PTO	901 5		202 4
BOLT/M 8X30	402 5	LABEL/WARNING/BELT	901 2	QSYOKE ASSY	S01 16
BOLT/M10X20	201 23	LABEL/WARNING/HOT	901 3	RBB	501 12
BRACKET/CASE/LH	201 21	LINKPIN	501 36	RING, SNAP/16 C	202 13
BRACKET/CASE/RH	201 22	METAL/CENTER	301 12	RING, SNAP/17 C	202 12
BUSH/16X18X15	202 10	METAL/SIDE	301 1	RING, SNAP/30 C	501 4
BUSH/30X34X20	501 2	NIPPLE, GREASE	202 15	RING, SNAP/52 C	301 6
CAP/32	403 5		301 11		301 19
CASE/BEVEL	201 1		301 14	RING/SLIDE	S01 7
	P01 2		501 6		S01 14
CASE/BEVEL/28-1 ASSY	P01 1		501 15	RING/SNAP	201 8
CHAIN ASSY	S01 8	NUT	201 26		201 12
	S01 15		202 18		301 10
COLLAR, THRUST	501 5		301 16		301 23
COLLAR/26X36X3	202 3		402 6		P01 9
COLLAR/BRADE	301 9	NUT/M16	202 8		P01 13
	301 22		501 16	ROD, CHAIN TENSION	202 17
COLLER/26X34X15	301 24	NUT/M20X1.5	302 4	SAFETYGUARD/IN	S01 6
COVER/B/LH/SFH ASSY	403 1	NUT/WASHER	402 3	SAFETYGUARD/OUT	S01 13
COVER/B/RH/SFH ASSY	403 3		403 6	SEAL, OIL/TC305512	201 20
COVER/CASE	201 3		403 8		P01 21
	P01 4		501 20	SEAL, OIL/TC35528	301 8
COVER/DISCHARGE COMP	402 1		501 24		301 21

Alphabetical Index

8657-095-300-00

Description	Fig. Key	Description	Fig. Key	Description	Fig. Key
SEAL/OIL	201 9	WHEEL/GAUGE/FRONT	501 18		
	301 7		501 22		
	301 20		501 32		
	P01 10	WHELL ASSY	501 11		
SHAFT/BRADE	301 3				
SHAFT/INPUT	201 6				
	P01 7				
SHAFT/OUTPUT	201 11				
	P01 12				
SHAFTYOKE	S01 2				
SHIM/0. 1	201 14				
	201 18				
	P01 15				
	P01 19				
SHIM/0. 2	201 15				
	201 19				
	P01 16				
	P01 20				
SHIM/1. 2	302 3				
SLEEVEYOKE	S01 9				
SPACER	502 5				
SPRING, CHAIN TENSION	202 16				
SPRING, CLUTCH RETURN	402 4				
SPRING/CLIP	501 9				
SPRING/HC042	502 3				
SPRING/HC058	501 27				
STOPPER/MOWER	501 26				
SURCLIP/HOLE	S01 5				
	S01 12				
TIRE/8X3. 00-4 ASSY	501 13				
WASHER	202 6				
	202 14				
WASHER /M12	501 21				
WASHER, PL/M14	201 25				
WASHER, PL/M22	502 6				
WASHER, SP/M10	201 27				
WASHER, SP/M16	202 7				
	501 17				
WASHER, SP/M20	302 5				
WASHER/20X60X06	302 2				
WASHER/30X50X05	501 3				
WASHER/45X55X01	201 13				
	P01 14				
WASHER/M10	201 28				
WHEEL/GAUGE ASSY	501 10				